



THE LOFT

STORAGE AND EQUIPMENT COMPARTMENT

US PATENT No. 10,105,998

Auto Opening LOFT Wiring Installation

WARNING:

 Improper wiring of AO-Latches will result in damage and void warranty. Adhere strictly to the wiring guide.

Purpose:

This document was prepared to provide instructions for the wiring installation of the Auto Opening Loft.

Installation Instructions:

- **Brown Wire** = Ground
- **Red Wire** = +12V (Fuse at 3 Amp Max)
- **Orange Wire** = Momentary Switch / +12V (Fuse at 3 Amp Max)
- **Note:** Wires can be ignition or battery hot.

 **Orange Wire** must go to separate Momentary Switch.

 Do NOT use any Gun Timer to wire the AO-Latches.

Please contact our Customer Service Department at 847-459-1460 with any additional questions.