



THE LOFT

STORAGE AND EQUIPMENT COMPARTMENT

PATENT PENDING No. 62/397, 198

Auto Opening LOFT Wiring Installation

Purpose:

This document was prepared to provide instructions for the wiring installation of the Auto Opening Loft.

Installation Instructions:

- Brown Wire = Ground
- Red Wire = +12V (Fuse at 3 Amp Max)
- Orange Wire = Momentary Switch / +12V (Fuse at 3 Amp Max)
 - o Note: Wires can be Ignition or Battery Hot
- **Warning:** Do Not Connect Red and Orange Wires together.
Orange Wire must go to separate Momentary Switch.

Note: A timer is NOT needed for Auto Opening feature to work.

Please contact our Customer Service Department at 847-459-1460 with any additional questions.