



THE LOFT

STORAGE AND EQUIPMENT COMPARTMENT

PATENT PENDING No. 62/397, 198

Supplemental

Installation Instructions

Ford Police Interceptor Utility 2013+
w/ Troy Cargo Containment Partition

Note: Read standard LOFT and Troy instructions to familiarize yourself with the installation of each product.

1. If Troy Partition is already installed you must remove the driver and passenger side window panels and Troy mount brackets. The mount brackets will be replaced with brackets supplied by LUND.
2. Drill a 1" Hole on each factory d-pillar trim panel to access 3rd row seatbelt weld nut. (See Fig. 1)



Fig. 1


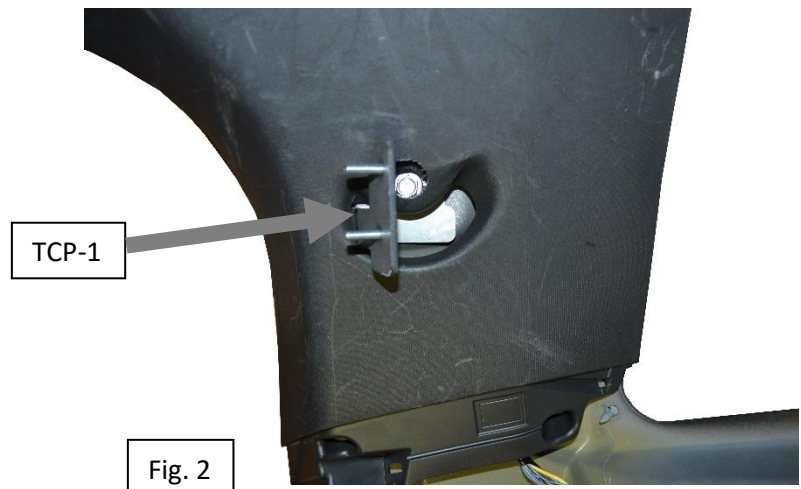


Fig. 2

3. Install LOFT brackets TCP-1 and TCP-2 using supplied self-tapping 3/8" bolts. (See Fig. 2) Tighten securely and install supplied 1" hole plug to cover bolt hole.


- Cut the driver side Troy side window panel. (See Fig 3.) for dimension information.

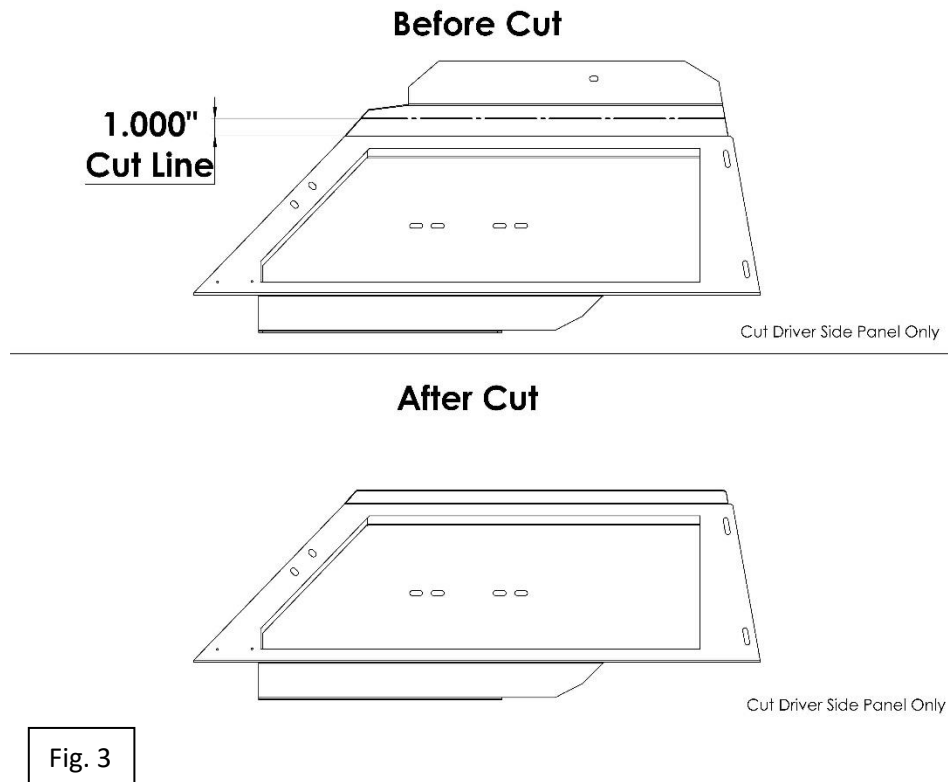

- Add supplied rubber edge molding to cut edge. Install Troy side window partition per Troy instructions.
- Install LOFT side brackets TCP-3 and TCP-4 with supplied 1/4-20" hardware. (See Fig. 4)



7. Attach the (2) LOFT TCP-5 rear L Brackets to the LOFT using supplied 5/16" hardware.
8. Install the LOFT in vehicle by drilling through and attaching the TCP-5 brackets to the Troy seat partition by using supplied 5/16" hardware. (See Fig. 5) and attaching the LOFT to the TCP-3 and TCP-4 brackets already installed in step 6. (See Fig. 4)
(2) people are recommended for the step above.
Be certain that there is clearance so that the LOFT opens and closes easily without rubbing on the Troy Partition.

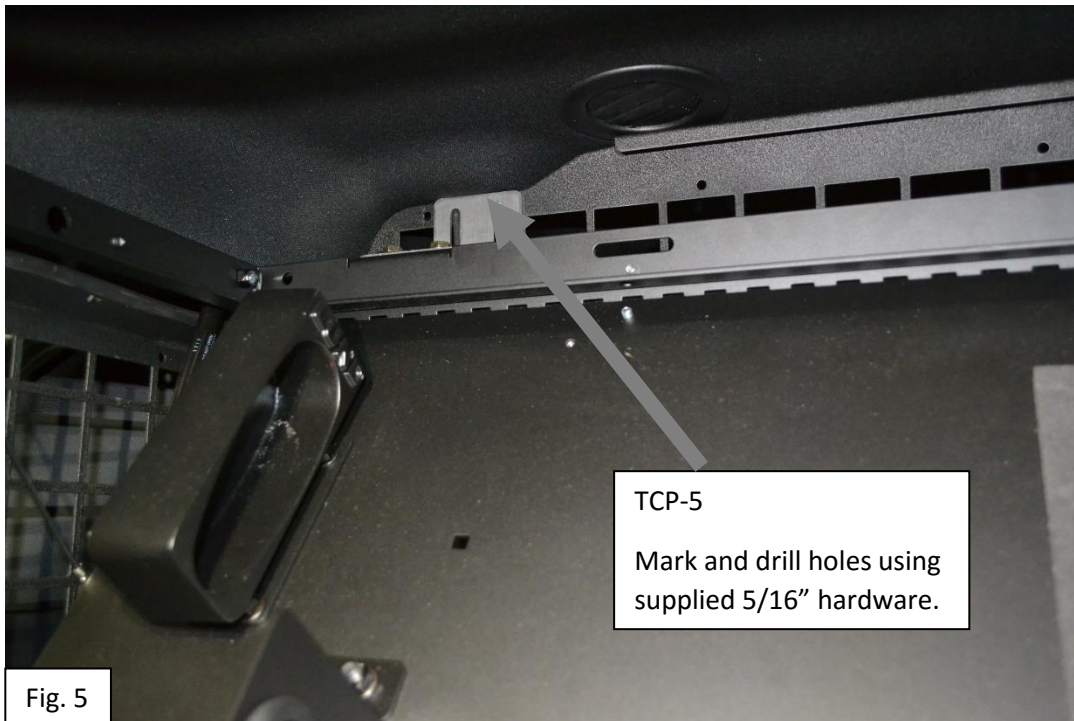

9. Follow standard LOFT instructions for positioning and completing the installation of the LOFT.