



3175 MacARTHUR BLVD. • NORTHBROOK, IL • 60062
847-459-1460 • FAX 847-714-9443
www.lund-industries.com
www.data-carts.com

FDRS-FPI-U

Fold-Down Slide-Out Tray Instructions:


Vehicle must have a cage behind the 2nd row seat to mount tray to.



Fig. 1

Mark and
drill (4) holes.
2 on each side.

CAUTION:
Always check before
drilling or screwing to
be certain not to hit
any lines, wiring, etc.

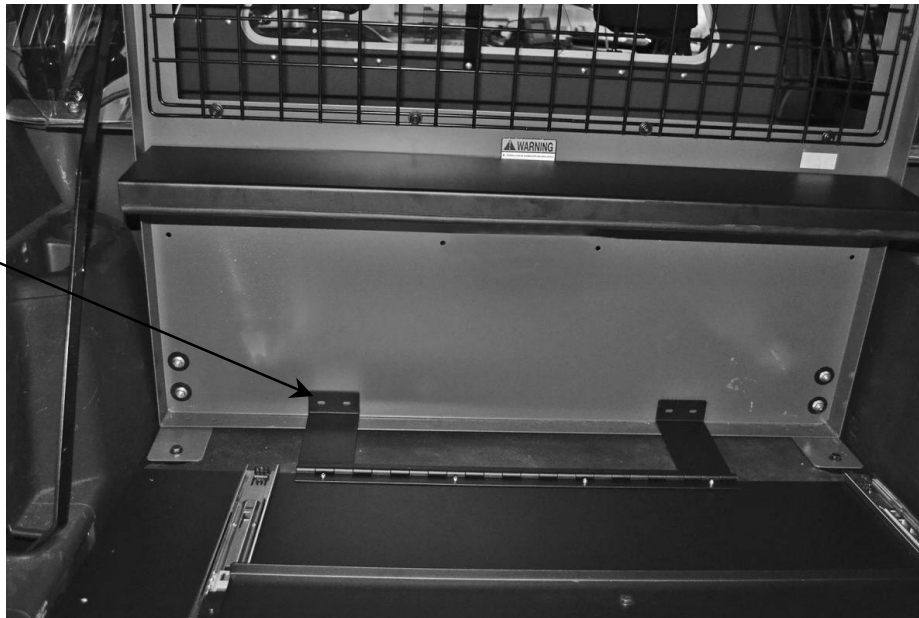

- 1) Open vehicle trunk and remove any items that may be in the way.
- 2) Lay the tray in rear of vehicle with mounting legs towards cage **See Fig. 1**.
- 3) Center the tray. Mark and drill holes through rear seat cage and attach with 1/4-20 hardware provided.

- 4) Attach the top “U” channel to the top of the tray using the locking turn knobs. Raise tray to upright position. Mark and drill holes to mount the “U” channel to the back of the cage. **See Fig. 2.** (Be certain “U” channel is mounted high enough to allow fold-down tray to move freely.)
- 5) Securely tighten all hardware.

Fig. 2

Mark and
drill (4) holes.
2 on each side.



- 6) The sliding equipment tray can be removed for bench work by releasing and separating the slide section. **See Fig.3**



Fig. 3

Important: The amount and weight of equipment mounted to tray can make the tray heavier to open and close. The higher the equipment is mounted towards the top edge of the tray, the heavier it will be to open and close. We recommend a maximum equipment weight of 20 lbs. Remember to leave plenty of slack in your wiring for the up and down, in and out movement of the tray.