

Ford Police Inceptor Sedan 2011-Newer Ford Police Inceptor Utility 2011-Newer Vehicle Base

The Ford Police Interceptor 2011 or Newer is a no drill solution to mount Lund Industries products. The system allows two positions for the FP-STEP to locate the pole in the optimum position.


Tools Need for Installation

1/2" Socket


9/16" Socket

Installation

1. Remove the camp from the top of the passenger front leg trim
2. Use a 1/2 inch socket to remove the bolts on the front of the passenger seat legs
3. Slide the base under the passenger seat, aligning the slots in the base with the bolt holes in the frame
4. Slide the base towards the center of the vehicle and secure it and the passenger seat with the bolts removed in step two above
5. Insert the trim caps removed and step one above
6. Use 9/16 inch socket to secure the FP-STEP to the top of the base in the desired hole pattern

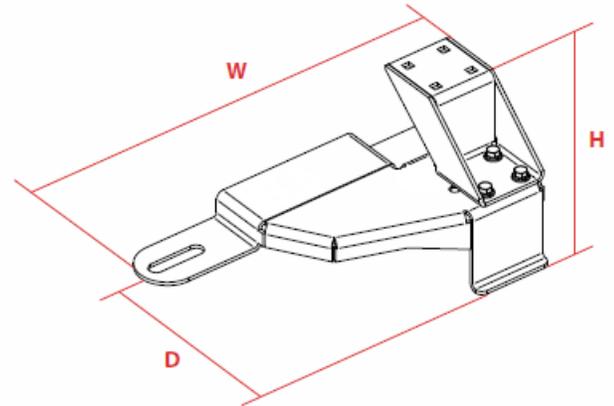

Remove trim cap from passenger side seat

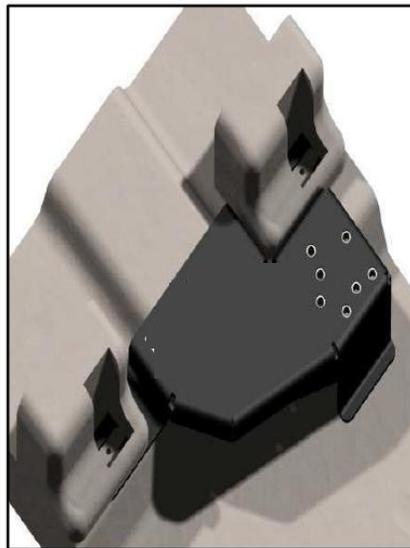

Secure the base under the passenger side seat.



Add FP-STEP to top of base for completed assembly.

Product Mounting Disclaimer

Lund Industries, Inc. is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Lund Industries, Inc. products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Lund Industries, Inc. specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Lund Industries, Inc. product instruction sheets.