



# THE LOFT

STORAGE AND EQUIPMENT COMPARTMENT

US PATENT No. 10,105,998

## Installation Instructions

### 2021+ Chevy Tahoe PPV/SSV


### LOFT-21TAH-AO

***Always check for wires before cutting or drilling.***

- Follow installation steps on standard Gun LOFT
- Cut drivers side headliner a small amount to fit corner of lock as shown in **Fig. 1**
- Before putting the rear seat belt retractor plastic trim piece back you will need to **cut off the back half to allow the electronic lock to sit correctly in roof as shown in Fig. 1 & 2**
- Next you will need to mark off where the passenger side lock will go in the roof liner and cut. You will want to give yourself some extra room for adjustment so cut slightly larger from front to back as shown in **Fig. 3 & 4** below.

***\*\*\*Double check for any factory wiring that may be in the roof liner before cutting and use a newer sharp blade for the cut\*\*\****

- Proceed to mount the back brackets and secure tightly using provided hardware.
- Once mounted you may now reinstall all trim panels that were removed from the beginning

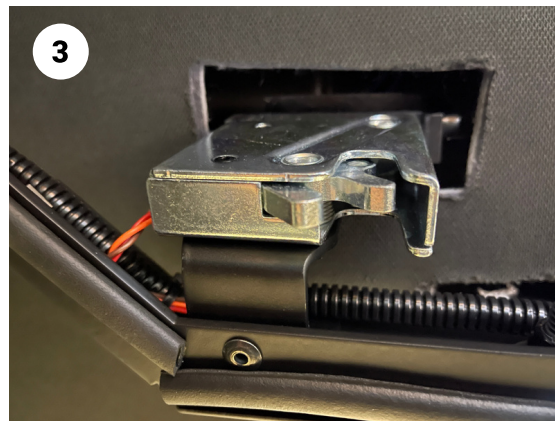

Add small screw to hold trim in place.