



# THE LOFT

STORAGE AND EQUIPMENT COMPARTMENT

US PATENT No. 10,105,998

## Installation Instructions

2020 Ford Police Interceptor Utility

LOFT with Setina Partition & Rear Cargo Window Guards

### Installation Steps:

1. Install Setina Partition and window guards.
2. Attach the 2 "L" brackets to the Setina cage support brackets at the rear hatch roof area shown in (Fig.1)
3. Center and install the LOFT to the Setina partition (shown in original LOFT install guide) using the supplied LOFT Setina brackets.
4. Next push the hatch side of the LOFT up to the installed "L" brackets and drill 2 holes for 5/16" bolts in the front of the LOFT.
5. Install bolts and tighten all hardware.
6. Lastly, install the side window bracket shown in (Fig 2.) Attach to the Setina side window bracket & then to the LOFT rear mounting tab with 1/4" x 20 Hardware.

Fig 1.

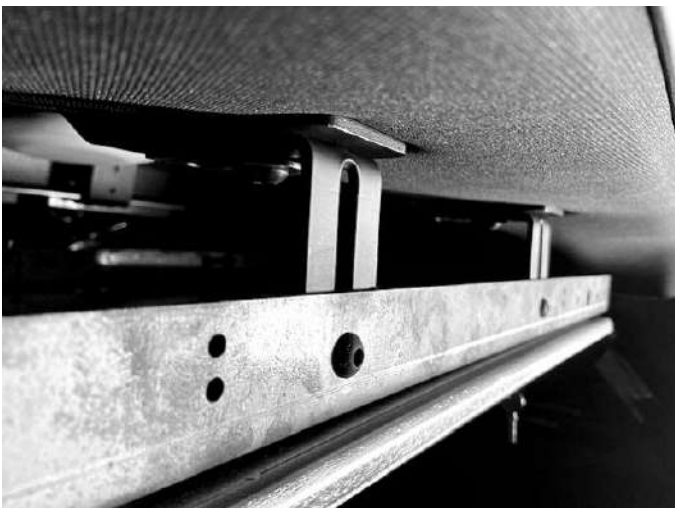


Fig. 2

