



3175 MacARTHUR BLVD. • NORTHBROOK, IL • 60062
847-459-1460 • FAX 847-714-9443
www.lund-industries.com
www.data-carts.com

ODM-PIU20 2020 Interceptor Utility On-Dash Mount



Caution: Always Check for wiring, modules, etc. Before Drilling into the Dash

1. Remove the 2 factory screws on top of the center dash as shown in **Fig.1**
2. Place the **ODM-PIU20** on top of the dash and mark your center hole and larger 1" hole if desired to run cables behind dash as shown in **Fig 2**.
3. Once marked remove the ODM and factory top plate to make sure there is nothing in the way of your drilling points. While you have the factory top plate still off drill a 1 1/4" hole where you would run your wires through if you choose to.
4. Re-install both OEM top plate then the ODM on top of it, secure the ODM with the 2 provided screws replacing the ones you had removed in step 1.
5. Pre-Drill the 3rd hole with 3/16" Drill Bit then screw in the provided #14 sheet metal screw shown in **Fig.2 (Do not over tighten or distort dash when tightening)**
6. Mount your tablet and run wires.

Fig 1.

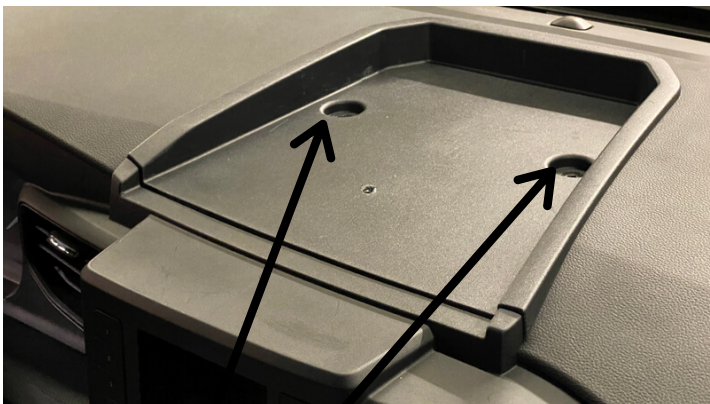


Fig 2.

