



3175 MacARTHUR BLVD. • NORTHBROOK, IL • 60062
847-459-1460 • FAX 847-714-9443
www.lund-industries.com
www.data-carts.com


2020+ Ford Interceptor Utility
Front Fascia Removal
P/N PASS-2-PIU20



Always!

- Read all instructions before installing any Lund products.
- Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!
 - Use hardware provided with install kit

- Open the vehicle hood. Use a 10mm socket and remove the (4) hex head screws securing the top of the front bumper cover, **(Fig 1)**.
- Using a 7mm socket remove the hex head screws securing the bottom of the front bumper cover, **(Fig 2)**.
- On each side of the vehicle, use a 7mm socket, and remove the (4) hex head screws from the wheel well, **(Fig 3)**.
- On each side of the vehicle, use a trim removal tool and remove the upper and lower panel retainers securing the fender liner, **(Fig 4 & 5)**.
- Pull the fender liner back to locate the (2) hex head screws within the wheel well securing the front bumper cover to the fender. Remove the (2) fasteners using a 10mm socket, **(Fig.6)**. Repeat for passenger side.

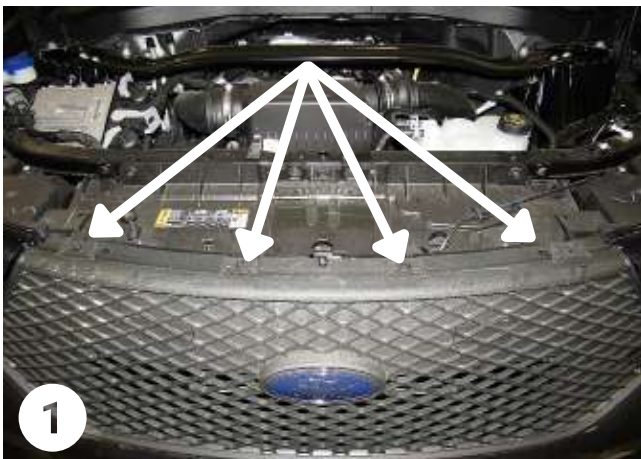

- With assistance slowly pull the front bumper cover away from the vehicle, unplug the wire harness and remove the front bumper cover from the vehicle. **(Fig. 7)**
- Unsnap the clips around the perimeter securing the upper and lower air deflector, then remove the air deflector from the radiator support bracket. **(Fig. 8)**
- You are now ready to install the PASS Brackets and Bumper - See PASS Install Guide for further installation

