



3175 MacARTHUR BLVD. • NORTHBROOK, IL • 60062
847-459-1460 • FAX 847-714-9443
www.lund-industries.com
www.data-carts.com

2020+ Ford Interceptor Utility
31x40 SecureStor Trunk Box Install Guide
P/N SSTB-3140-PIU20






Remember to remove spare tire & Jack before installing


Always!

- Read all instructions before installing any Lund products.
- Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!
 - Use hardware provided with install kit


- Remove two rear plastic trim pieces by removing two bolts shown **(Fig.1)**.
- Remove all styrofoam panels from rear to access 2 side crash bar mounting bolts located closest to the rear hatch. **(Fig.2&3)**
- Next Install Large "L" Bracket using the factory crash bar bolt's on driver's and passenger's side and tighten securely. **(Driver's Side Shown in Pic (Fig.4)**
- After large "L" brackets are installed on each side, reinstalling the styrofoam panels. **(Fig.2) Install 2 plastic cover panels (Fig. 1)** but do not bolt in yet.
- Next place one of the large rails over the 2 holes used to secure the factory cover panel, center rail and drill two 3/8" holes and bolt in using the supplied M10 x 50 Bolts as shown **(Fig. 5)**

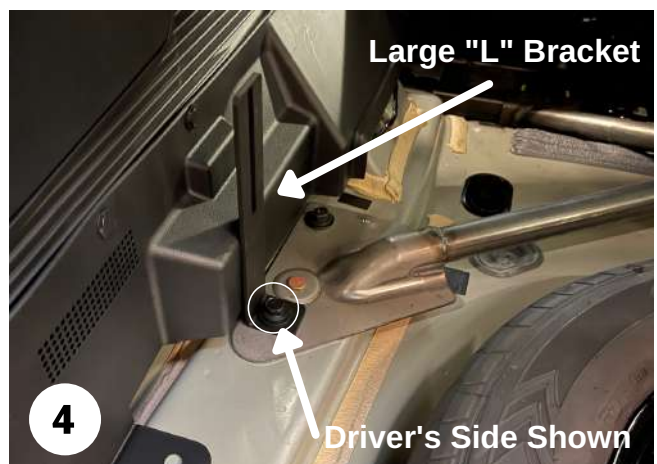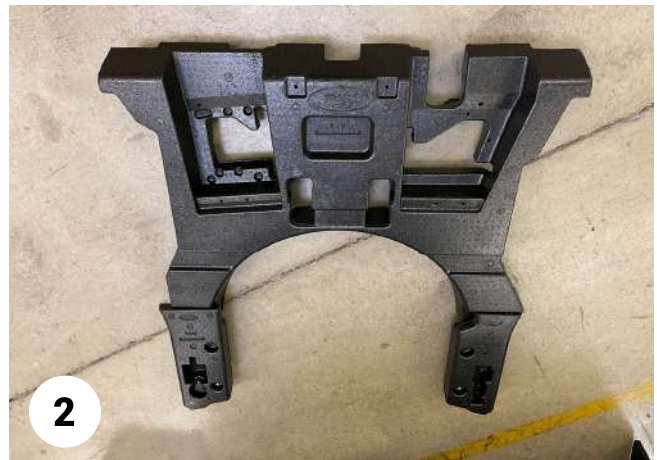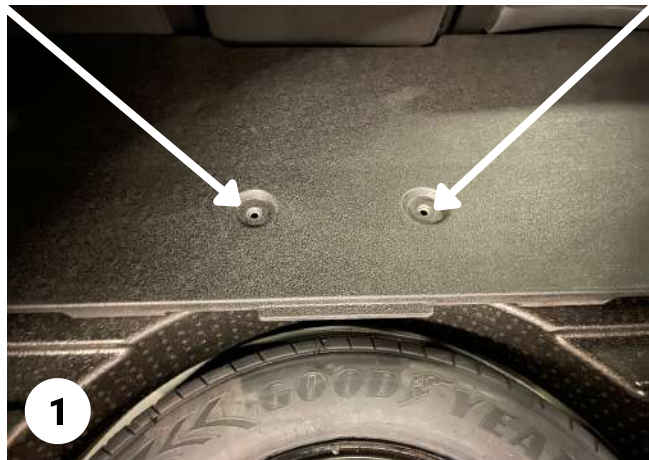

- Attach second rail to trunk box as close to the drawer edge as possible using supplied hardware. **(Fig. 6)**
- Once second rail is attached, slide box into vehicle on top of 1st rail & align with first pem nut on box. Loosely install provided bolt on each side of box. **(Fig.6)**
- Next align "U" bracket to Large "L" Bracket and second pem on side of box & loosely attached bolts on each side. **(Fig.6)**
- Position and level box then securely tighten all hardware

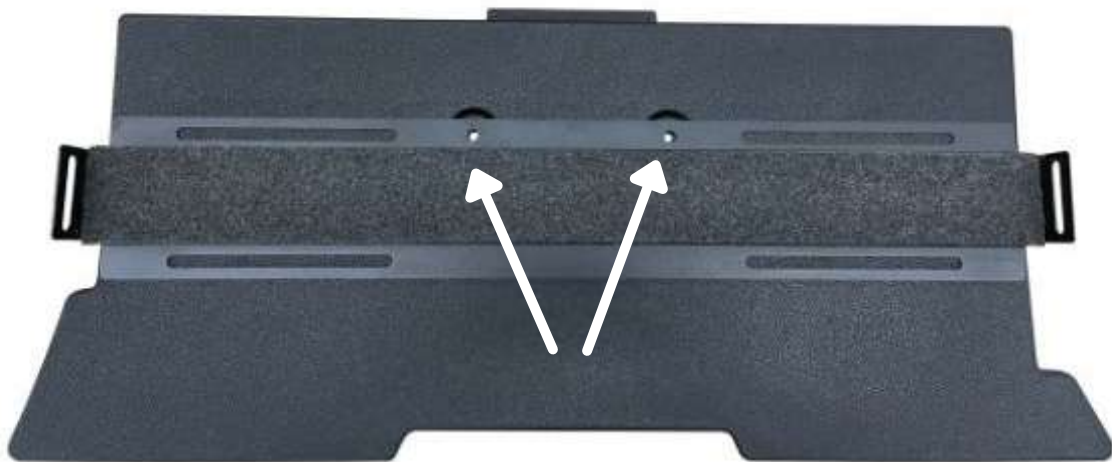

5

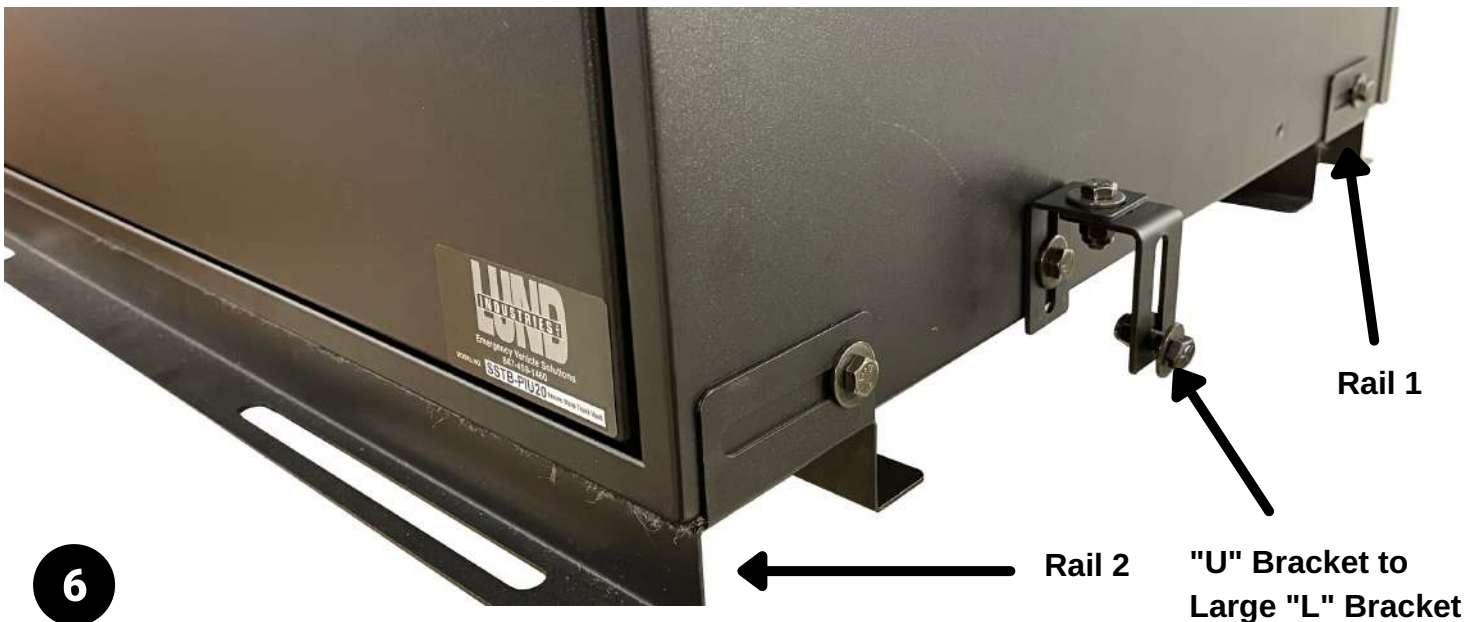

6