


****Warning****

- You must read and follow all of these installation instructions. Failure to follow the installation instructions may result in serious bodily injury or death.
- Do not install or use the ARM-TELS Assembly in the area in which the airbag on the vehicle may be deployed. The installer and user of the ARM-TELS Assembly are responsible for installing and using the ARM-TELS Assembly outside the area in which an airbag may be deployed. (See Product Mounting Disclaimer Below)
- Keep these installation instructions with the product and readily available in the vehicle for future reference of other users of the product
- Additional copies of the installation instructions can be obtained from Lund Industries Inc. If you need assistance or have any questions, call Lund Industries Inc, at 1-800-504-1460.
- Do not remove warning label from product under any circumstances.

Installation:

- The ARM-TELS locking slide arm mounts directly to a Center Upper Pole or other type of mounting equipment that contains a swivel pattern cutout.
- To mount on a Center Upper Pole or other type of mounting equipment that contains a swivel pattern cut out, set the arm on the mount so the 1/4-20unc studs protrude through the curved cutouts. Two studs should protrude through one of the cutouts and one stud should protrude through the, opposite cutout. Attach with the flat washers and lock nuts that ore supplied. (See Figure 1.)

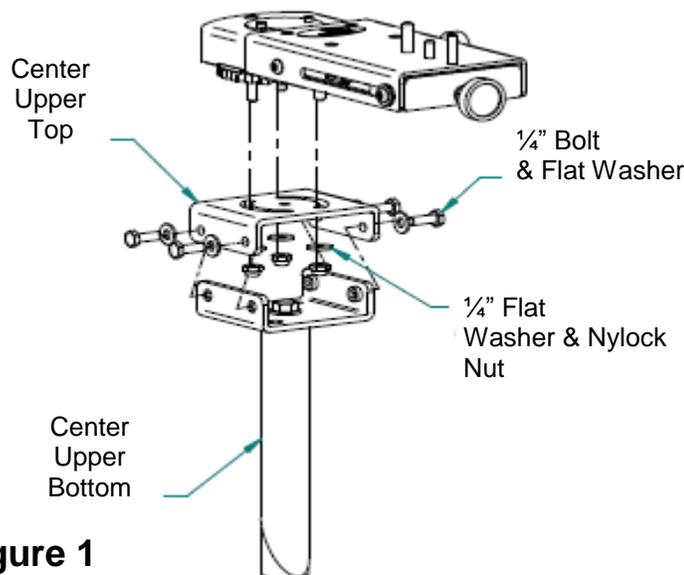

Attaching a TS-60 Clevis to the ARM-TELS locking slide arm:

- A Clevis can be added to the ARM-TELS locking slide arm. To attach remove the 2 1/2" Steel Washer and (2) 2 1/2" Nylon Washer from the clevis. Place one of the 2 1/2" Nylon Washer on the three pressed in 1/4" studs protruding from the slide plate. Next place the clevis assembly over the studs protruding from the slide plate. Third place the remaining 2 1/2" Nylon Washer and 2 1/2" Steel Washer over the protruding studs on the slide plate. Attach the clevis in place with (2) 1/4" flat washers and nylon nuts that were removed when you first removed the large washers from the original clevis configuration. Tighten the nylon nuts until the desired friction is obtained for the rotation of the clevis. (See Figure 2)

How to use the Mongoose Locking Slide Arm:

- The ARM-TELS locking slide arm is designed to accommodate four motions of adjustment. The first being a 360 degree swivel that is actuated by the front lever. Pulling out on the lever releases the gear latch located in the base and allows the mount to swivel. To latch the arm in place, position the arm in the desired location and release the spring loaded lever. Wiggle the arm back and forth to make sure the lever has engaged the teeth on the gear. The second motion is the slide. To actuate the slide, pullout and hold the spring loaded pin. Pull the mount along the slide a minimum of 1/2" before releasing the pin to ensure the mount does not latch back in the stowed position. Once you have released the pin, pull forward on the mount until it is located in the desired position. The third motion is the clevis swivel. The clevis can swivel 120 degrees (60 deg. left and 60 deg. right) for assembly. The fourth motion is the clevis tilt. The amount of clevis tilt will depend on the type of Clevis that was purchased. ARM-TELS can tilt 30 degrees forward and 30 degrees backward for a total of 60 degrees when used with a TS-60 Clevis or it can tilt 90 degrees when using a TS-90 Clevis.

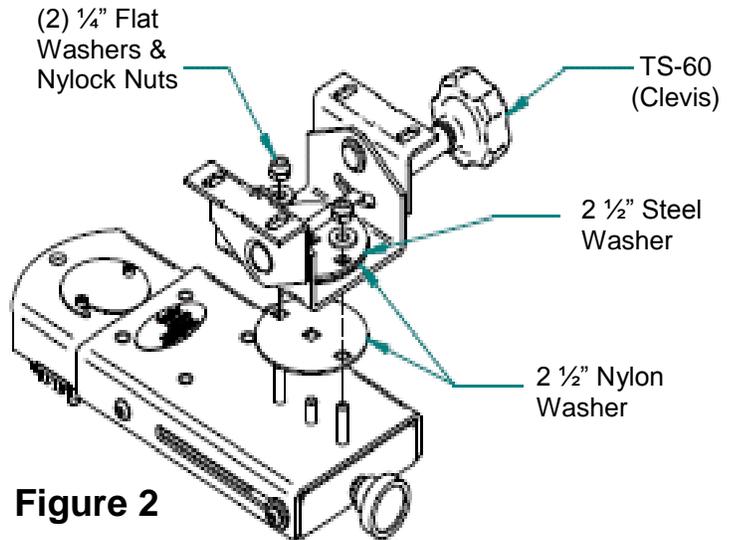


Figure 2

Note: Do not Use this product if either latch mechanism is disabled or missing. The product should be out of the airbag zone with the slide in the latched position when the vehicle is in use.

****Warning****

- The ARM-TELS locking slide arm, should not be positioned in the area where the airbag maybe deployed.
- DO NOT position the equipment in front of an airbag. Equipment positioned in front of an airbag may cause serious injury or death if an airbag is activated.
- High speed vehicle turns may cause parts of the assembly to swivel, interfering with the driver or other equipment.
- If installation of the equipment requires that the equipment be placed in front of an airbag, the airbag should be deactivated. In order to secure permission for deactivating the airbag you must contact the National Highway Traffic Safety Administration at 1-800-424-9393 to gain permission to do so. If you have any questions or need assistance, call Lund Industries Inc, at 1-800-504-1460.

Product Mounting Disclaimer

Lund Industries, Inc. is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Lund Industries, Inc. products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Lund Industries, Inc. specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Lund Industries, Inc. product instruction sheets.