LUND INDUSTRIES INC
3175 MacArthur Blvd. • Northbrook, IL • 60062
847-459-1460 • Fax 847-714-9443
www.lund-industries.com
www.data-carts.com

PASS-2-RAMSSV
PASS® Bumper System Installation Instructions

1: Remove factory nuts and bolts holding tow hooks. Remove tow hooks.

Factory nuts and bolts

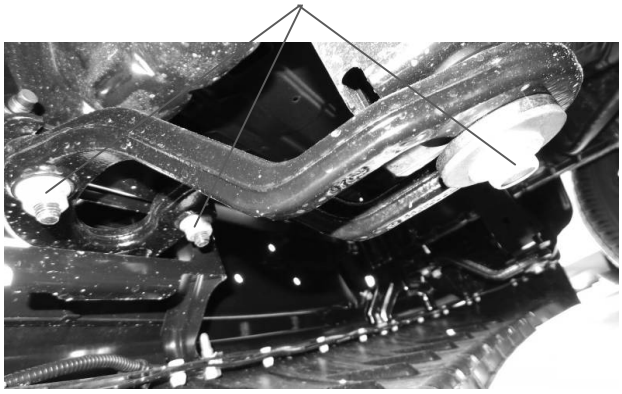

Factory tow hooks

See reverse side for additional instructions

2: Install PASS brackets in tow hook area by re-using factory hardware removed in previous step**.** Tighten all hardware.

3: Test fit PASS bumper to brackets. Be certain PASS bumper is not being spread apart by mounting brackets. If mounting brackets do not align with openings in PASS bumper, loosen brackets and re-align.

4: Mount PASS bumper to brackets using supplied 3/8” hardware.

5: Tighten all hardware securely.