


303 Messner Dr. • Wheeling, IL • 60090 847-459-1460 • FAX 847-459-1569 www.Lund-Industries.com

VH-CHGR / VH-CHGR11 Console Mounting Instructions

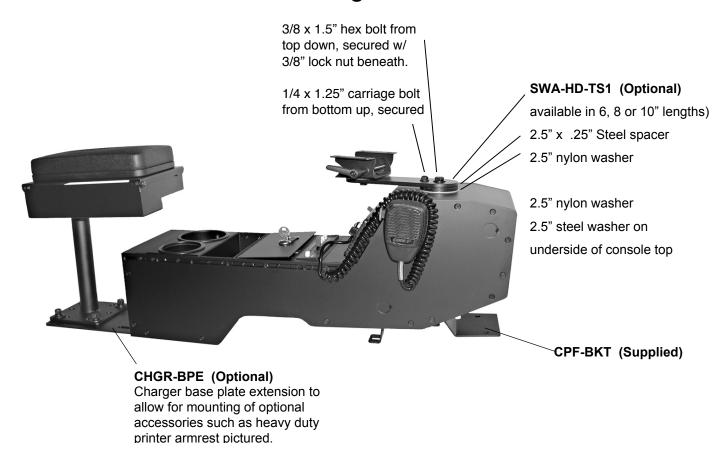

- **1.** Remove factory mounted console or base plate.
- 2. Install Lund front bracket using the (3) factory stude and nuts.
- 3. Mount the bottom front of the console to the front mounting bracket using (2) 3/8" carriage bolts, lock washers, flat washers and nuts supplied.
- **4.** Attach rear of console using factory hardware & mounting holes.